

iVIC-5DR Android Mode Manual



in Vehicle Infotainment Center

(i) IMPORTANT PLEASE READ!

MARNING

Keep in mind, vehicle's navigation touch screen differs from your Android Device touch screen. Do NOT expect the same touch sensitivity, swipe option, or multi-touch capability (zoom in, zoom out, and etc).

Swipe option is NOT available for all compatible vehicle's models, use control arrow buttons to make your selections.

This product mirrors Android Device onto the vehicle's navigation screen. Features, options, and applications varies by Android Device manufacturers.

WARNING

VAIS TECHNOLOGY SHALL NOT BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES OR DAMAGES TO PERSONS OR PROPERTY ARISING OUT OF THE USE OF THE PRODUCT, OR FOR ANY LOSS OF BUSINESS OR PROFITS, EVEN IF VAIS TECHNOLOGY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. VAIS TECHNOLOGY'S LIABILITY FOR BREACH OF WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT, NOTWITHSTANDING ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

DRIVERS OF THE VEHICLE ARE SOLELY RESPONSIBLE FOR THE SAFE OPERATION OF THE VEHICLE AND THE SAFETY OF YOU AND YOUR PASSENGERS. FOR SAFETY PURPOSES, THE FUNCTIONALITY OF THIS PRODUCT SHOULD NOT BE USED WHILE THE VEHICLE IS BEING DRIVEN. SUCH USE COULD BE A DISTRACTION TO THE DRIVER, WHICH COULD CAUSE AN ACCIDENT LEADING TO SERIOUS INJURY OR DEATH.

SOME STATES/PROVINCES OR OTHER GOVERNMENTAL JURISDICTIONS (SUCH AS CITIES) MAY HAVE LAWS THAT PROHIBIT THE OPERATION OF A VIDEO SCREEN WITHIN THE SIGHT OF THE DRIVER. YOU SHOULD USE THE PRODUCT ONLY IN LOCATIONS WHERE IT IS LEGAL TO DO SO. ALTHOUGH VAIS TECHNOLOGY STRONGLY RECOMMENDS THAT THE VIDEO FUNCTIONALITY OF THIS PRODUCT NOT BE USED AT ANY TIME WHILE THE VEHICLE IS IN MOTION, IT IS YOUR RESPONSIBILITY TO DETERMINE WHETHER THE PRODUCT CAN BE LEGALLY USED IN ANY GIVEN LOCATION. ANY USE OF THE PRODUCT IN ANY LOCATION WHERE IT IS ILLEGAL TO DO SO MAY PROHIBIT YOU FROM RECOVERING DAMAGES IN THE EVENT OF AN ACCIDENT OR MAY BE USEABLE AGAINST YOU AS EVIDENCE OF NEGLIGENCE.


WARNING

DRIVE SAFELY AND FOLLOW TRAFFIC RULES.

VAIS TECHNOLOGY AND/OR ITS OWNERS/EMPLOYEES/SHAREHOLDERS/SUPPLIERS SHALL NOT BE HELD RESPONSIBLE FOR ANY USE OF THIS PRODUCT OR ANY DIRECT AND INDIRECT CONSEQUENCES THEREOF. WATCHING THIS SCREEN AND MAKING SELECTIONS WHILE DRIVING CAN CAUSE A SERIOUS ACCIDENT, DAMAGE, OR BREAK THE LAW.

IF YOU USE THIS PRODUCT IN YOUR VEHICLE, IT IS YOUR RESPONSIBILITY TO MAKE YOUR PASSENGERS AWARE OF THE ABOVE WARNING.

Android Device Setup Guide Steps

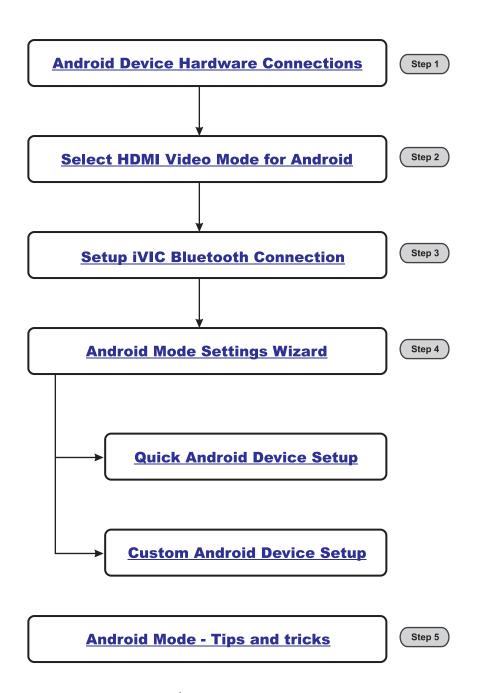

Video Graphics Mode

iVIC screen will be displayed when you start the car. If you turn your car off with iVIC Video Graphics Mode active, turning the car on will resume iVIC display.

Exception: If reverse gear was activated shortly after the vehicle start up, switching gear to DRIVE will activate MAP screen.

To activate Video Graphics Screen push [AUDIO] button.



VAIS Technology safety message is displayed for 5 seconds. After 5 seconds you can touch the screen to go to Video Graphics menu.

After 5 more seconds safety message will go off.

Touch the screen to get to the iVIC side "Source Menu".

Source Selection (Home Screen)

Touch [HOME SCREEN SETUP MODE] icon to enable or disable Sources.

Checkmark indicates current source


Android HDHI Video A/V 1 A/V 2 Factory Interface


Switch to CD-MP3 emulation mode. To return back to iVIC Video Graphics mode (VG mode), select iVIC CD-MP3 source and press and hold SCAN button.

Touch the icon to select desired source.

(i) How to check iVIC Software/Firmware version



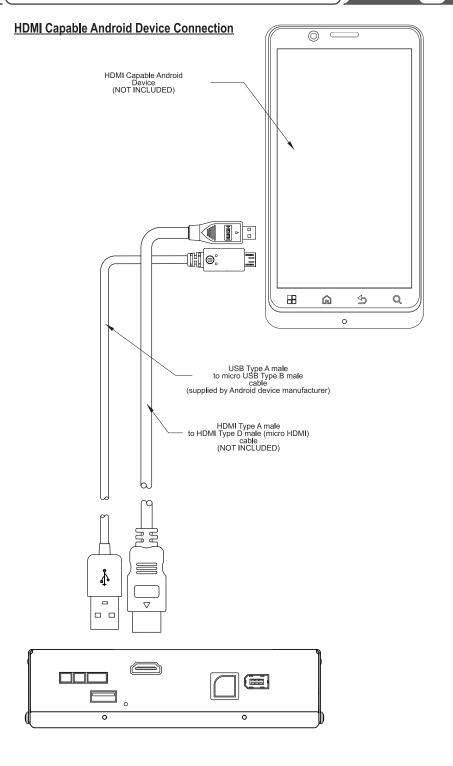

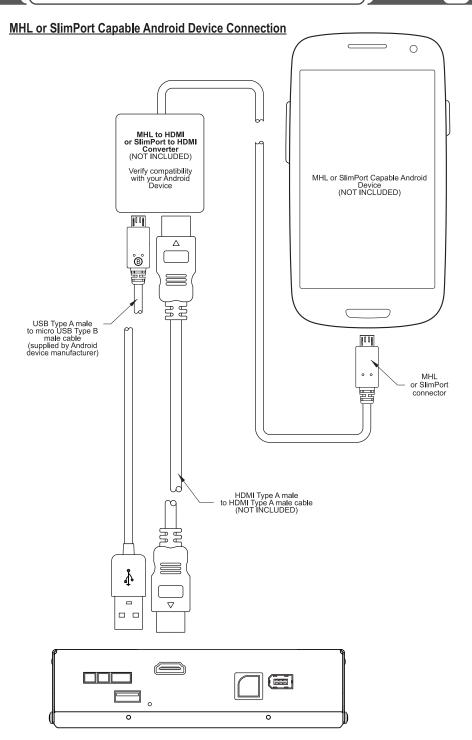




HDMI Video Mode Settings used to select Digital Video Source Resolution. Available for "HDMI Video" and "Android" sources ONLY.

HDMI Video Mode Selection (480p, 720p, Auto)

Touch [iVIC SETTINGS] icon to select HDMI Video Mode.



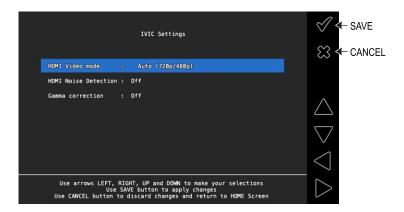

Three Options are available:

480p Native mode. No vertical scaling used, may cause some gray/black area around actual image.

Gray/Black areas depend on HDMI Video source connected, iVIC has no control over those areas. **Not supported by all Android Devices.**

720p This mode uses both vertical and horizontal scaling.

AUTO Depending on Video Source connected, iVIC switches between 720p and 480p, **(720p/480p)** 720p being the first choice.

HDMI Noise Detection:


In case of unstable video signal/noise you will get blue screen if this feature is ON. Otherwise video noise will be visible on vehicle display.

Setup iVIC Bluetooth Connection




Android device MUST BE connected to iVIC, device MUST BE ON, and screen "UNLOCKED" during setup process


First you need to connect iVIC bluetooth device to your Android device.

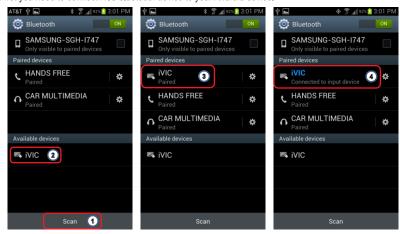

If Android device connected to iVIC via HDMI/MHL and outputs compatible video signal, Android control bar on the right will show up. Proceed to Settings Wizard by following steps bellow.

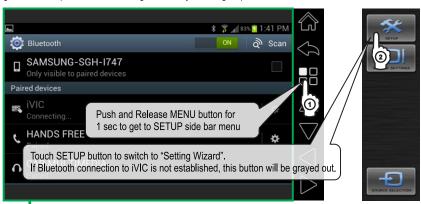

This screen portion displayed by Android device

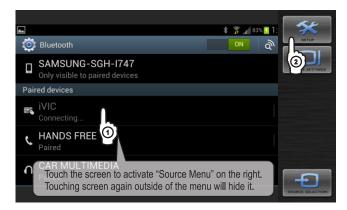

If Android device is not connected to iVIC via HDMI/MHL or DOES NOT output compatible video signal, you will get this screen.

Some phones require manual video output activation.



NEXT SCREEN / NEXT STEP

Use this button to go to the NEXT STEP.

In case of the mistake made in one of the steps, use this button to skip through all the steps, until you come back to desired step. In this case do not use SAVE or CANCEL buttons.



ORIENTATION

Use this button to go to switch between corners for Landscape or Portrait Layout Settings, and for Landscape or Portrait Layout Touch Settings.





CURSOR

Use cursor arrows for Menu selection or for adjustments in Settings Wizard,





SAVE

Use this to save changes.

 \approx

CANCEL

Use this to cancel changes.


Quick Android Device Setup

Custom Android Device Setup



Attention ! Overscan Settings:

If your Android device has HDMI Overscan feature you need to proceed to Custom Android Device Setup. (Overscan option has been seen on some Motorola phone models.)

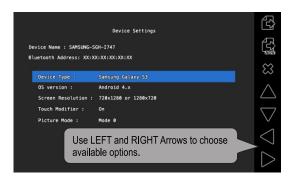



If your Android Device is available in the device type list, select it and proceed to the end of Settings Wizard by pressing NEXT without making any changes to the custom settings. Press SAVE to apply your device selection.

Pay attention in steps (3,4,6 and 7) to verify that "White" Frame fits Android Device screen visible area. Make adjustments if necessary.









STEP 3. [A] - Touch "NEXT" if "White" Frame adjustment is not required.
"NEXT" will skip to STEP 5.
Adjust Top/Left Corner and Touch "ORIENTATION" [B] to proceed to STEP 4.





\(\)





STEP 6. [A] - Touch "NEXT" if "White" Frame adjustment is not required.
"NEXT" will skip to STEP 8.
Adjust Top/Left Corner and Touch "ORIENTATION" [B] to proceed to STEP 7.

Make No Changes





Read Tips and Tricks section.
Verify your settings. If you are not satisfied with a touch/mouse accuracy, proceed to the custom settings.

STEP 8



Device Type:

Select your Android device if available in the list, otherwise select "Custom" device. NOTE: By selecting different device from current will erase custom settings for your device. Cancel will exit settings without saving.

OS version:

Check your Android device OS version (needed to select proper Keyboard Layout)

Touch modifier:

If Android device OS version is 4.0 and above, we recommend to turn it ON. Some devices do not require this feature to be ON, turn it OFF if you experience awkward touch behavior.

Picture mode:

Mode 0 - no color correction


Mode 1 and Mode 2 - enhanced color correction. (Clearly visible on some applications, such as Google Maps in close zoom). May not be necessary for all Android device models



If your Android Device is NOT available in the device type list you have two options. **Option 1:** select "CUSTOM" and select screen resolution, and then touch "NEXT". (skips Touch Resolution Adjustment).

Option 2: select "CUSTOM" and select "custom" screen resolution, and then touch "NEXT ADV" to proceed with every step of the Settings Wizard to make the appropriate setup.

If you are NOT satisfied with our settings for available device type, you can make changes in Settings Wizard and press save at the last step.

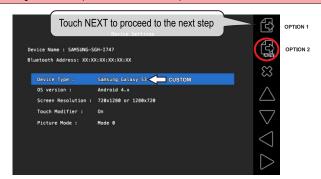



Attention ! Overscan Settings:

If your Android device has HDMI Overscan feature (has been seen on some Motorola phone models) you need to adjust Overscan settings for the best possible screen fit prior to Top/Left and Bottom/Right corner borders adjustment in Landscape mode (refer to the next page).



Carefully follow the steps in the SETUP WIZARD, to establish TOP/LEFT and BOTTOM/RIGHT corner borders in LANDSCAPE mode





Please read and follow these Instructions before proceeding to step below.



"White" Frame around Android device screen sets the borders.

- First adjust Top/Left corner of the white frame to match Top/Left corner of Android device screen visible area.
- (A) Use CURSOR Arrows to make adjustments.
- B Use ORIENTATION button to switch to 2 Bottom/Right corner adjustments.



- 2 Adjust Bottom/Right corner of the white frame to match Bottom/Right corner of Android device screen visible area.
- Use CURSOR Arrows to make adjustments.
- When satisfied with selected area use NEXT to proceed to next step.



Carefully follow the steps in the SETUP WIZARD, to establish HORIZONTAL TOUCH Screen Resolution in LANDSCAPE mode,



Please read and follow these Instructions before proceeding to step below.



- 1 This step will adjust Horizontal Touch Resolution. Mouse cursor will run from left to right.
- Push and hold RIGHT cursor arrow to move mouse cursor in horizontal direction. Single touches are acceptable. MAY TAKE UP TO 5 minutes. Monitor cursor movement on your Android device screen. We recommend to slow down when approaching the edge of the Android device screen and use single clicks on RIGHT cursor arrow.
 - Stop when reached the edge (2) of Android device screen.
 - (If went beyond the visible area of Android screen, push ORIENTATION button to switch to vertical Touch setup and push it again to switch back to horizontal to start over.)
- B Use ORIENTATION button to go to Vertical Touch Resolution adjustment.





Carefully follow the steps in the SETUP WIZARD, to establish VERTICAL TOUCH Screen Resolution in LANDSCAPE mode.

Some Android devices do not support Portrait Mode, when recognize HDMI/MHL connection. In this case skip to "Finalize Settings" and save your changes.



- 3 This step will adjust Vertical Touch Resolution. Mouse cursor will run from left to right.
- Push and hold DOWN cursor arrow to move mouse cursor in Vertical direction. Single touches are acceptable. Monitor cursor movement on your Android device screen. We recommend to slow down when approaching the edge of the Android device screen and use single clicks on RIGHT cursor arrow.
 Stop when reached the edge of Android device screen.
- D When satisfied with selected area use NEXT to proceed to next step.




Carefully follow the steps in the SETUP WIZARD, to establish TOP/LEFT and BOTTOM/RIGHT corner borders in PORTRAIT mode





Please read and follow these Instructions before proceeding to step below.

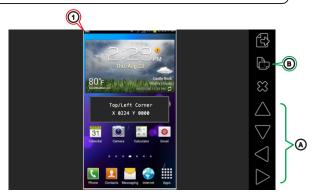


"White" Frame around Android device screen sets the borders.

- First adjust Top/Left corner of the white frame to match Top/Left corner of Android device screen visible area.
- Use CURSOR Arrows to make adjustments.
- B Use ORIENTATION button to switch to 2 Bottom/Right corner adjustments.



- 2 Adjust Bottom/Right corner of the white frame to match Bottom/Right corner of Android device screen visible area.
- © Use CURSOR Arrows to make adjustments.
- When satisfied with selected area use NEXT to proceed to next step.

Carefully follow the steps in the SETUP WIZARD, to establish HORIZONTAL TOUCH Screen Resolution in PORTRAIT mode

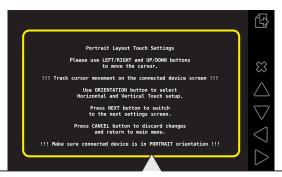

Please read and follow these Instructions before proceeding to step below.



- 1 This step will adjust Horizontal Touch Resolution. Mouse cursor will run from left to right.
- ② Push and hold RIGHT cursor arrow to move mouse cursor in horizontal direction. Single touches are acceptable. MAY TAKE UP TO 5 minutes. Monitor cursor movement on your Android device screen. Stop when reached the edge ② of Android device screen. (If went beyond the visible area of Android screen, push ORIENTATION button to switch to vertical Touch setup and push it again to switch back to horizontal to start over.)
- B Use ORIENTATION button to go to Vertical Touch Resolution adjustment.




Carefully follow the steps in the SETUP WIZARD, to establish VERTICAL TOUCH Screen Resolution in PORTRAIT mode



- 3 This step will adjust Vertical Touch Resolution, Mouse cursor will run from left to right,
- © Push and hold DOWN cursor arrow to move mouse cursor in Vertical direction, Single touches are acceptable. Monitor cursor movement on your Android device screen.

 Stop when reached the edge ② of Android device screen.
- D When satisfied with selected area use NEXT to proceed to next step.



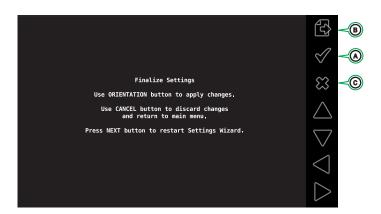

- Use SAVE button to apply the changes made in Settings Wizard.
- To go back to Settings Wizard first step, use NEXT button.
- To disregard all changes made in Settings Wizard use CANCEL button.

How To Hide/Show Side Menu





Push in Upper Left corner of the screen to hide/show side bar menu.

Mouse/Touch Positioning RESET



Use "Hide/Show Side Menu" feature to reset mouse cursor in the event it's not functioning properly.



Screen Orientation and Touch mode

Android device may output its display in either portrait or landscape mode. iVIC expects the display to be landscape. Use the feature bellow to switch to appropriate touch mode to match your Android device output.







Push and release BACK button for at least 1 sec to select the right touch mode for your PORTRAIT or LANDSCAPE operation.

Portrait mode is not highly recommended unless application does not support landscape mode. We recommend to use third party Applications (such as "Rotation Locker" or "Ultimate Rotation Control") to force and lock landscape mode.



Use side bar menu OFF/ ON feature to reset mouse cursor in the event it's not functioning properly.

Manual Bluetooth Reconnect

In case iVIC is not connected or was disconnected from your Android Device simply touch Bluetooth re-connect button once to re-connect to Last Known Bluetooth Device.



(i) IMPORTANT PLEASE READ!

MARNING

Keep in mind, vehicle's navigation touch screen differs from your Android Device touch screen. Do NOT expect the same touch sensitivity, swipe option, or multi-touch capability (zoom in, zoom out, and etc).

Swipe option is NOT available for all compatible vehicle's models, use control arrow buttons to make your selections.

This product mirrors Android Device onto the vehicle's navigation screen. Features, options, and applications varies by Android Device manufacturers.

MARNING

VAIS TECHNOLOGY SHALL NOT BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES OR DAMAGES TO PERSONS OR PROPERTY ARISING OUT OF THE USE OF THE PRODUCT, OR FOR ANY LOSS OF BUSINESS OR PROFITS, EVEN IF VAIS TECHNOLOGY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. VAIS TECHNOLOGY'S LIABILITY FOR BREACH OF WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT, NOTWITHSTANDING ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

DRIVERS OF THE VEHICLE ARE SOLELY RESPONSIBLE FOR THE SAFE OPERATION OF THE VEHICLE AND THE SAFETY OF YOU AND YOUR PASSENGERS. FOR SAFETY PURPOSES, THE FUNCTIONALITY OF THIS PRODUCT SHOULD NOT BE USED WHILE THE VEHICLE IS BEING DRIVEN. SUCH USE COULD BE A DISTRACTION TO THE DRIVER, WHICH COULD CAUSE AN ACCIDENT LEADING TO SERIOUS INJURY OR DEATH.

SOME STATES/PROVINCES OR OTHER GOVERNMENTAL JURISDICTIONS (SUCH AS CITIES) MAY HAVE LAWS THAT PROHIBIT THE OPERATION OF A VIDEO SCREEN WITHIN THE SIGHT OF THE DRIVER. YOU SHOULD USE THE PRODUCT ONLY IN LOCATIONS WHERE IT IS LEGAL TO DO SO. ALTHOUGH VAIS TECHNOLOGY STRONGLY RECOMMENDS THAT THE FUNCTIONALITY OF THIS PRODUCT NOT BE USED AT ANY TIME WHILE THE VEHICLE IS IN MOTION, IT IS YOUR RESPONSIBILITY TO DETERMINE WHETHER THE PRODUCT CAN BE LEGALLY USED IN ANY GIVEN LOCATION. ANY USE OF THE PRODUCT IN ANY LOCATION WHERE IT IS ILLEGAL TO DO SO MAY PROHIBIT YOU FROM RECOVERING DAMAGES IN THE EVENT OF AN ACCIDENT OR MAY BE USEABLE AGAINST YOU AS EVIDENCE OF NEGLIGENCE.

WARNING

DRIVE SAFELY AND FOLLOW TRAFFIC RULES.

VAIS TECHNOLOGY AND/OR ITS OWNERS/EMPLOYEES/SHAREHOLDERS/SUPPLIERS SHALL NOT BE HELD RESPONSIBLE FOR ANY USE OF THIS PRODUCT OR ANY DIRECT AND INDIRECT CONSEQUENCES THEREOF. WATCHING THIS SCREEN AND MAKING SELECTIONS WHILE DRIVING CAN CAUSE A SERIOUS ACCIDENT, DAMAGE, OR BREAK THE LAW

IF YOU USE THIS PRODUCT IN YOUR VEHICLE, IT IS YOUR RESPONSIBILITY TO MAKE YOUR PASSENGERS AWARE OF THE ABOVE WARNING.